


HP® P2015 LARGE HOPPER CONVERSION INSTRUCTIONS



HP® P2015
MONOCHROME LASER PRINTER

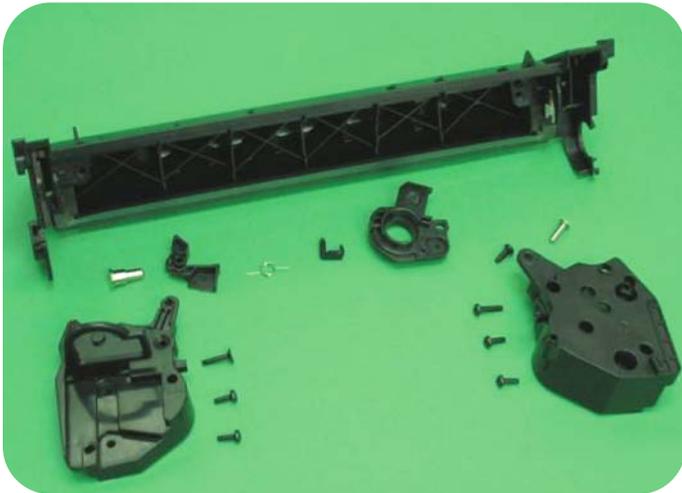

P2015 • 1320
CONVERSION KIT (#11114)



P2015 • 1320
JUMBO HOPPER (#11151)

www.uninetimaging.com

USA Ph +1 310 280 9620 Fx +1 310 838 7294	EUROPE Ph +34 93 757 1335 Fx +34 93 741 4166	HUNGARY Ph +36 945 06 022 Fx +36 945 06 023	JAPAN Ph +81 3 44 55 2789 Fx +1 310 838 7294	CHINA Ph +86 010 5126 5581 Fx +86 010 5885 8719	VENEZUELA Ph +58 241 8268189 Fx +58 241 824244	BRAZIL Ph +55 11 4822 3033 Fx +55 11 4822 3353	ARGENTINA Ph +54 11 4571 2388 Fx +54 11 4574 3706
--------------------------------------------------------	-----------------------------------------------------------	----------------------------------------------------------	-----------------------------------------------------------	--------------------------------------------------------------	-------------------------------------------------------------	-------------------------------------------------------------	----------------------------------------------------------------

11124 Washington Blvd., Culver City, California U.S.A. 90232 • techsupport2@uninetimaging.com



INSTRUCTIONS FOR CONVERSION OF HP1320 CARTRIDGES TO HP® P2015 CARTRIDGES USING UNINET P2015 CONVERSION KIT (#11114)

OEM HP® 1320 Cartridge (Q5949X), shown on left.



UNINET P2015 CONVERSION KIT (#11114)

UniNet P2015 Conversion Kit includes the following:

P2015 Large Waste Hopper w/PCR saddles, saddle springs, PCR contact, PCR contact trigger, hinge pins, OPC pin, drum bearing plate, & mounting screw. All sealing foams and recovery blade are pre-installed.

P2015 Left End Cap includes mounting screws, metal contact, & hopper tension spring. Right End Cap includes mounting screws and hopper tension spring



With the **UniNet P2015 Conversion Kit**, you can make the following conversions.

A. OEM HP® 1320 Starter A Cartridge (49A) to P2015 Starter A Cartridge (53A)



B. OEM HP® 1320 Standard X (49X) to P2015 Standard X (53X).



C. Convert either the above OEM HP® 1320 Cartridges into a Jumbo Cartridge to suit the HP® P2015 printer.

The steps for each conversion are similar. We will illustrate the following steps using a **UniNet (#11151) Jumbo Hopper**.

www.uninetimaging.com

USA Ph +1 310 280 9620 Fx +1 310 838 7294	EUROPE Ph +34 93 757 1335 Fx +34 93 741 4166	HUNGARY Ph +36 945 06 022 Fx +36 945 06 023	JAPAN Ph +81 3 44 55 2789 Fx +1 310 838 7294	CHINA Ph +86 010 5126 5581 Fx +86 010 5885 8719	VENEZUELA Ph +58 241 8268189 Fx +58 241 824244	BRAZIL Ph +55 11 4822 3033 Fx +55 11 4822 3353	ARGENTINA Ph +54 11 4571 2388 Fx +54 11 4574 3706
--------------------------------------------------------	-----------------------------------------------------------	----------------------------------------------------------	-----------------------------------------------------------	--------------------------------------------------------------	-------------------------------------------------------------	-------------------------------------------------------------	----------------------------------------------------------------

11124 Washington Blvd., Culver City, California U.S.A. 90232 • techsupport2@uninetimaging.com



WASTE HOPPER INSTALLATION

1. The first step is to assembly the P2015 Waste Hopper. If you choose to re-use OEM components, please carefully disassemble the OEM drum/PCR/Wiper Blade from the OEM HP 1320 cartridge and clean them thoroughly.

Install the wiper blade as shown and tighten the 2 screws. Remember to lubricate the wiper blade.



2. Install the PCR as shown. If you are using an OEM PCR, please make sure it is carefully cleaned.

Remember to add conductive grease on the black PCR saddle.

Check the conductivity across the PCR and the PCR contact by using a multimeter.



INSTALLING THE OPC DRUM

3. First, place the Drum into the Waste Hopper as shown.

NOTES

www.uninetimaging.com

USA	EUROPE	HUNGARY	JAPAN	CHINA	VENEZUELA	BRAZIL	ARGENTINA
Ph +1 310 280 9620	Ph +34 93 757 1335	Ph +36 945 06 022	Ph +81 3 44 55 2789	Ph +86 010 5126 5581	Ph +58 241 8268189	Ph +55 11 4822 3033	Ph +54 11 4571 2388
Fx +1 310 838 7294	Fx +34 93 741 4166	Fx +36 945 06 023	Fx +1 310 838 7294	Fx +86 010 5885 8719	Fx +58 241 824244	Fx +55 11 4822 3353	Fx +54 11 4574 3706

11124 Washington Blvd., Culver City, California U.S.A. 90232 • techsupport2@uninetimaging.com



4. Attach the Bearing Plate with screws as shown.



5. Insert the OPC Pin on the opposite side by pressing in.



6. Assembled Waste Section.



INSTALLING THE PCR CONTACT TRIGGER

7. Install the PCR contact Trigger onto the P2015 Waste Hopper as shown in the following steps. This trigger is included in the P2015 Conversion kit.

First, insert the spring onto the trigger arm as shown.

www.uninetimaging.com

USA	EUROPE	HUNGARY	JAPAN	CHINA	VENEZUELA	BRAZIL	ARGENTINA
Ph +1 310 280 9620	Ph +34 93 757 1335	Ph +36 945 06 022	Ph +81 3 44 55 2789	Ph +86 010 5126 5581	Ph +58 241 8268189	Ph +55 11 4822 3033	Ph +54 11 4571 2388
Fx +1 310 838 7294	Fx +34 93 741 4166	Fx +36 945 06 023	Fx +1 310 838 7294	Fx +86 010 5885 8719	Fx +58 241 824244	Fx +55 11 4822 3353	Fx +54 11 4574 3706

11124 Washington Blvd., Culver City, California U.S.A. 90232 • techsupport2@uninetimaging.com



8. Add a drop of glue in area shown, then place the trigger arm as shown on the photo



9. Insert the Trigger arm locking pin to fix the trigger in position.



10. Fill Hopper with toner and insert the filler cap.

NOTE: The photo shows a **UniNet 1320 Jumbo hopper (#11151)** with seal fitted. If you are using an OEM HP® 1320 hopper for this conversion, make sure you disassemble the OEM Left/Right end caps, Mag Roller, Mag Roller bushing, Mag Roller, Wipers, Doctor Blade, and carefully clean all components thoroughly, except for the end caps which are discarded.



11. Install the doctor blade into the Hopper, and place the Mag Roller wiper on each end of the Doctor Blade. Tighten the two screws (shown) that hold the doctor blade and wipers in place.

www.uninetimaging.com

USA	EUROPE	HUNGARY	JAPAN	CHINA	VENEZUELA	BRAZIL	ARGENTINA
Ph +1 310 280 9620	Ph +34 93 757 1335	Ph +36 945 06 022	Ph +81 3 44 55 2789	Ph +86 010 5126 5581	Ph +58 241 8268189	Ph +55 11 4822 3033	Ph +54 11 4571 2388
Fx +1 310 838 7294	Fx +34 93 741 4166	Fx +36 945 06 023	Fx +1 310 838 7294	Fx +86 010 5885 8719	Fx +58 241 824244	Fx +55 11 4822 3353	Fx +54 11 4574 3706

11124 Washington Blvd., Culver City, California U.S.A. 90232 • techsupport2@uninetimaging.com



12. Place the Left/Right Mag Roller Bushing on each end of the Mag Roller.



13. Install the Left Stabilizer on the P2015 Left End Cap as shown.



14. Now, install the Left End Cap onto the left side of the hopper.

The P2015 Left End Cap includes the Pull Tab feature like the OEM but does not include the orange clip. The orange clip is available separately or you can use the OEM orange clip Tighten all screws on the Left End Cap.



15. Install the Mag Roller as shown in the Hoper as shown in the photo. Then insert the Right Stabilizer, and all drive gears on the right side of the hopper.

www.uninetimaging.com

USA	EUROPE	HUNGARY	JAPAN	CHINA	VENEZUELA	BRAZIL	ARGENTINA
Ph +1 310 280 9620	Ph +34 93 757 1335	Ph +36 945 06 022	Ph +81 3 44 55 2789	Ph +86 010 5126 5581	Ph +58 241 8268189	Ph +55 11 4822 3033	Ph +54 11 4571 2388
Fx +1 310 838 7294	Fx +34 93 741 4166	Fx +36 945 06 023	Fx +1 310 838 7294	Fx +86 010 5885 8719	Fx +58 241 824244	Fx +55 11 4822 3353	Fx +54 11 4574 3706

11124 Washington Blvd., Culver City, California U.S.A. 90232 • techsupport2@uninetimaging.com



16. Install the P2015 Right End Cap on the right side of the Hopper. Tighten the 2 screws on the Right End Cap.



17. Assemble the Hopper side and Waste Hopper together and insert the hinge pin on each side to hold them together.



18. Pin inserted on other side.



19. Finally, install the Chip, and the conversion from an HP® 1320 cartridge to a cartridge that will fit the HP® P2015.

Conversion is complete.

www.uninetimaging.com

USA	EUROPE	HUNGARY	JAPAN	CHINA	VENEZUELA	BRAZIL	ARGENTINA
Ph +1 310 280 9620	Ph +34 93 757 1335	Ph +36 945 06 022	Ph +81 3 44 55 2789	Ph +86 010 5126 5581	Ph +58 241 8268189	Ph +55 11 4822 3033	Ph +54 11 4571 2388
Fx +1 310 838 7294	Fx +34 93 741 4166	Fx +36 945 06 023	Fx +1 310 838 7294	Fx +86 010 5885 8719	Fx +58 241 824244	Fx +55 11 4822 3353	Fx +54 11 4574 3706

11124 Washington Blvd., Culver City, California U.S.A. 90232 • techsupport2@uninetimaging.com